

# Liquid dispenser

hands-free hygiene system

**MEDICAL**  
**M**  
**INNOVATIONS**



## WALL MOUNTED WITH DRIP TRAY

### CODE: DISP-00-00

Screws and wall plugs are included

The hands-free liquid dispenser consists of an ABS plastic dispenser case and control box.

This touchless automatic dispenser accommodates one 800 ml liquid bag containing alcohol or soap solution.

### Available liquid solutions:

- Alcohol hand sanitizer
- Anti-bacterial hand soap
- Moisturising lotion

A built-in electronic infrared (IR) sensor activates the dispensing cycle. The dispenser is powered by 6 x AA batteries (not included in price). The battery life span is approximately 10 000 cycles.

A toggle switch can be adjusted to dispense either one, two or three millilitres of liquid.

**Colour:** White

**DIMENSIONS:** 125 mm (W) x 428 mm (H) x 140 mm (D)

## ADVANTAGES

- Convenient, reliable hands-free operation.
- Reduces operating costs due to fixed liquid dispensing.
- Time saver.
- Eliminates risk of germ transmission between users.
- Easy liquid bag replacement.
- Lockable for added tamper-resistance.
- Wide-view window for easy checking of liquid level.
- Suitable for use in homes, kitchens, restaurants, hotels, offices, beauty salons, schools and public areas.

## CLEANING

Keep the surface of the case clean. Cold, clean water or neutral soap can be used to clean the surface.



**Please contact us should you require further information or be interested in purchasing the liquid dispenser.**


**Tel:** +27 (21) 851 8484 **Fax:** +27 (21) 851 8482 **Email:** [info@medicalinnovations.co.za](mailto:info@medicalinnovations.co.za)

7 Cyclonite Street, The Interchange, Somerset West, South Africa • PO Box 3027, Somerset West, South Africa 7129



[www.medicalinnovations.co.za](http://www.medicalinnovations.co.za)

# Liquid dispenser

hands-free hygiene system

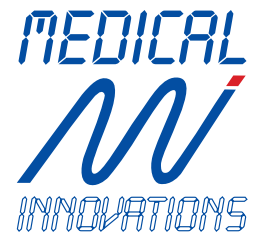

## Instructions

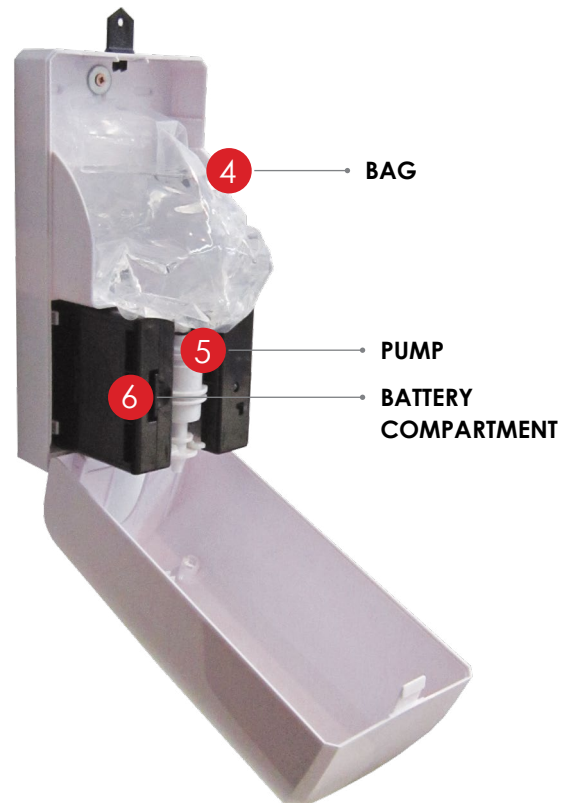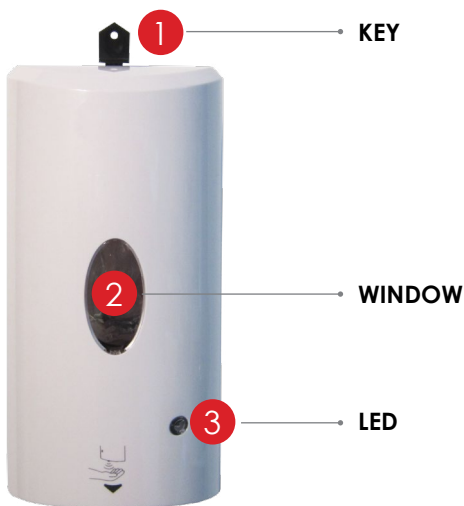

### Refill bag replacement

1. Insert the KEY (1) into the slot at the top of the dispenser.
2. Push the key down and gently open the cover.
3. Once the unit is open, remove the empty bag (4) by pulling it together with the pump (5) out towards you.
4. Remove the pump from the empty bag and place on the refill bag. Be sure to first remove the cap from the refill bag before inserting the pump.
5. Insert the bag into the dispenser unit with the pump facing to the back of the dispenser (see adjacent).
6. Ensure that the bag is securely fitted. Close the unit by clicking it into place.
7. The LED (3) will flash three times indicating the dispenser is ready for use.



### Battery replacement

1. Open the battery compartment (6) by depressing the battery compartment tab. Slide the unit out.
2. Insert six AA size alkaline batteries.
3. To close, slide the unit back in until it clicks into place.